

T4 (053B) TO RY4A WIRING CONFIGURATION

REGULATED PSU

+24V DC
0V DC
EARTH

*** IMPORTANT ***

USE T4 INSTALLATION SHEET AND
T4 INSTALLATION GUIDE FOR
T4 FUNCTIONS REFERENCE

ALL WIRES NOT USED MUST BE
TERMINATED SAFE.

T4(053B) LIGHT CURTAIN NEED TO
BE SET IN AUTO-START VIA
DIPSWITCH SETTING. REFER TO
T4(053B) INSTALLATION GUIDE.

