

T4 (053B) SERIES SAFETY LIGHT CURTAINS

INSTALLATION GUIDE

Smartscan Ltd Pywell Road Willowbrook Industrial Estate Corby Northamptonshire NN17 5XJ - England

Tel. +44 (0)1536 – 401 313 sales@smartscan.co.uk www.smartscan.co.uk

Important!

Failure to read and follow the instructions provided on the Installation Sheet and Installation Guide can lead to the incorrect application or use of the T4 (053B) series safety light curtain. This could lead to personal injury and damage to equipment. All applicable machine safety standards and regulations should be taken into account when installing the T4 (053B) series safety light curtain or any machine safety product.

The Installation Sheet and Installation Guide can be downloaded from our web site at www.smartscan.co.uk

The T4 (053B) series Safety Light Curtain Installation Guide (CD354/220116) is subject to change without notice. Smartscan Ltd shall not be held responsible for technical errors, editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material.

© 2016 Smartscan Ltd. All Rights Reserved. Unless explicitly stated otherwise, all rights including those in copyright in the content of this document are owned by or controlled for these purposes by Smartscan Ltd.

Except as otherwise expressly permitted under copyright law or Smartscan Ltd, reproduction of the document or alteration of this document may not be carried out in any way without first obtaining Smartscan Ltd.'s written permission.

CONTENTS


FIGURE A - UNPACKING	1
FIGURE B - CABLE CONDUCTORS	2
FIGURE C - OPERATING REQUIREMENTS	3
Status Indicators	
FIGURE D - IMPORTANT INSTALLATION CONSIDERATIONS	6
FIGURE E - ELECTRICAL CONNECTIONS	
Power Supply	
EXTERNAL DEVICE MONITORING (EDM)	10
SAFETY OUTPUTS OSSD1 AND OSSD2	
MUTE FUNCTION	11
MUTE OUTPUT	
STATUS OUTPUT	
COMMUNICATION LINK	
FIGURE F - MUTING TIMERS	13
MUTE INPUT DISPARITY TIME (A)	13
MUTE TIME OUT PERIOD (B)	14
MUTE DELAY OFF TIME (C)	14
FIGURE G - MECHANICAL INFORMATION	15
FIGURE H – FLOATING BLANKING	17
FIGURE I – IDENTIFICATION LABELS	17
FIGURE J – DIP SWITCH SETTINGS AND OPERATING MODES	18
DIRECT SETTINGS	10
1) Floating Beam Blanking	
2) Mute Time Out Period	
3) Modes	
4) Parity (ODD)	24
LEARN SETTINGS	
Learn Setting 0 - Fixed Beam Blanking	25
Learn Setting 2 - Mute Timer (Mode 2)	27
Learn Setting 3 - Mute Timer (Mode 3)Learn Setting 4 - Mute Timer (Mode 4)	
Learn Setting 4 - Mute Timer (Mode 4) Learn Setting 5 - Partial or Learn Fixed Muting	
Learn Setting 7 - Clear All Learnt	
FIGURE K – TEST AND MAINTENANCE	
TESTING THE SAFETY LIGHT CURTAIN WITH THE TEST PIECE	
MAINTENANCE	32
FIGURE L – OPERATION CYCLE	33
FIGURE M – PRODUCT RETURN PROCEDURE	34
FIGURE N - MODEL LIST	35
FIGURE O – DECLARATION OF CONFORMITY	36
FIGURE P - GLOSSARY OF WORDS AND LANGUAGE TRANSLATION	37

APPENDIX 1 – IMPORTANT SAFETY INFORMATION	38
APPENDIX 2 - CERTIFICATIONS	39
APPENDIX 3 - MIRRORS	40
APPENDIX 4 – SPECIFICATION TABLE	44
NOTES	45

T4 Series (Model No. 053B-xxxx) Safety Light Curtain Installation Sheet (CD240/190116)

Figure A - Unpacking

- Remove all packaging material and retain it
- □ Locate and keep the delivery note
- Inspect all items for transit damage
- Match goods supplied to those specified on the delivery note
- □ Keep the Installation Sheet in a safe place

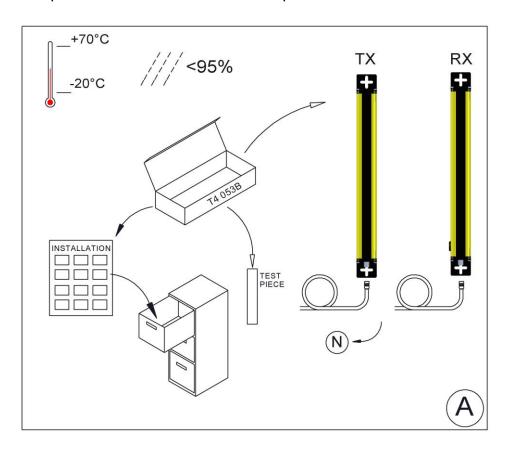

Each T4 (053B) series supplied would normally include:

- Safety Light curtain
- □ Test piece (excluding 053B-6xx)
- □ Installation sheet
- Service questionnaire form

Storage requirements:

- □ Humidity <95%
- □ Temperature range between –20°C and +70°C

CD354/220116 1 Smartscan Ltd

Figure B - Cable Conductors

STATUS OSSD 2 6 Pink (PK) Green (GN) OUTPUT 500mA R IN T OUT 7 Blue (BU) Blue (BU) DATA T OUT R IN 8 Red (RD) Violet (VI) DATA SHIELD SH SH TAIL (SH) TAIL (SH) LUM (OR) SSL (BK)	Sig	ignal Core Colour Current (I)					
0V DC 0V DC 2 Brown (BN) Grey (GY) MUTE 1 (MU1) RESET 3 Green (GN) Brown (BN) INPUT 3mA MUTE 2 (MU2) EDM 4 Yellow (YE) Orange (OR) INPUT 3mA MUTE (MUT) OSSD 1 5 Grey (GY) Yellow (YE) OUTPUT 500mA STATUS OSSD 2 6 Pink (PK) Green (GN) OUTPUT 500mA R IN T OUT 7 Blue (BU) Blue (BU) DATA T OUT R IN 8 Red (RD) Violet (VI) DATA SHIELD SHIELD SH SH TAIL (SH) LUM (OR) SSL (BK)	TX	RX		LUM (OR)	SSL (BK)	TX	
MUTE 1 (MU1) RESET 3 Green (GN) Brown (BN) INPUT 3mA MUTE 2 (MU2) EDM 4 Yellow (YE) Orange (OR) INPUT 3mA MUTE (MUT) OSSD 1 5 Grey (GY) Yellow (YE) OUTPUT 500mA STATUS OSSD 2 6 Pink (PK) Green (GN) OUTPUT 500mA R IN T OUT 7 Blue (BU) Blue (BU) DATA T OUT R IN 8 Red (RD) Violet (VI) DATA SHIELD SHIELD SH SH TAIL (SH) LUM (OR) SSL (BK)	+24V DC	+24V DC	1	White (WH)	Red (RD)	INPUT 1.5A	
MUTE 2 (MU2) EDM 4 Yellow (YE) Orange (OR) INPUT 3mA MUTE (MUT) OSSD 1 5 Grey (GY) Yellow (YE) OUTPUT 500mA STATUS OSSD 2 6 Pink (PK) Green (GN) OUTPUT 500mA R IN T OUT 7 Blue (BU) Blue (BU) DATA T OUT R IN 8 Red (RD) Violet (VI) DATA SHIELD SH IELD SH TAIL (SH) LUM (OR) SSL (BK)	0V DC	0V DC	2	Brown (BN)	Grey (GY)		
MUTE (MUT)	MUTE 1 (MU1)	RESET	3	Green (GN)	Brown (BN)	INPUT 3mA	
STATUS OSSD 2 6 Pink (PK) Green (GN) OUTPUT 500mA R IN T OUT 7 Blue (BU) Blue (BU) DATA T OUT R IN 8 Red (RD) Violet (VI) DATA SHIELD SH SH TAIL (SH) TAIL (SH) LUM (OR) SSL (BK)	MUTE 2 (MU2)	EDM	4	Yellow (YE)	Orange (OR)	INPUT 3mA	
R IN T OUT 7 Blue (BU) Blue (BU) DATA T OUT R IN 8 Red (RD) Violet (VI) DATA SHIELD SHIELD SH SH TAIL (SH) LUM (OR) SSL (BK)	MUTE (MUT)	OSSD 1	5	Grey (GY)	Yellow (YE)	OUTPUT 500mA	
TOUT R IN 8 Red (RD) Violet (VI) DATA SHIELD SH SH TAIL (SH) LUM (OR) SSL (BK)	STATUS	OSSD 2	6	Pink (PK)	Green (GN)	OUTPUT 500mA	
SHIELD SH SH TAIL (SH) LUM (OR) SSL (BK) 1 2 7 8 3	RIN	T OUT	7	Blue (BU)	Blue (BU)	DATA	
LUM (OR) SSL (BK)							
SSL (BK) ① ② ⑦ ⑧ ③	SHIELD SH SH TAIL (SH)						

The picture above shows the M12 connector pin out, the colour coding for the cable cores, the signal function for the corresponding cable core, and the current rating for input/output signals. The standard cable supplied will use the LUM colour code shown above.




T4 (053B) series (LUM) cable showing M12 connector

The T4 (053B) series safety light curtain requires a connection cable on the Transmitter (TX) head and a connection cable on the Receiver (RX) head. They are connected via the M12 (8 way) socket located on the bottom end cap. The M12 socket also forms a locator for the mounting bracket.

CD354/220116 2 Smartscan Ltd

Figure C - Operating Requirements

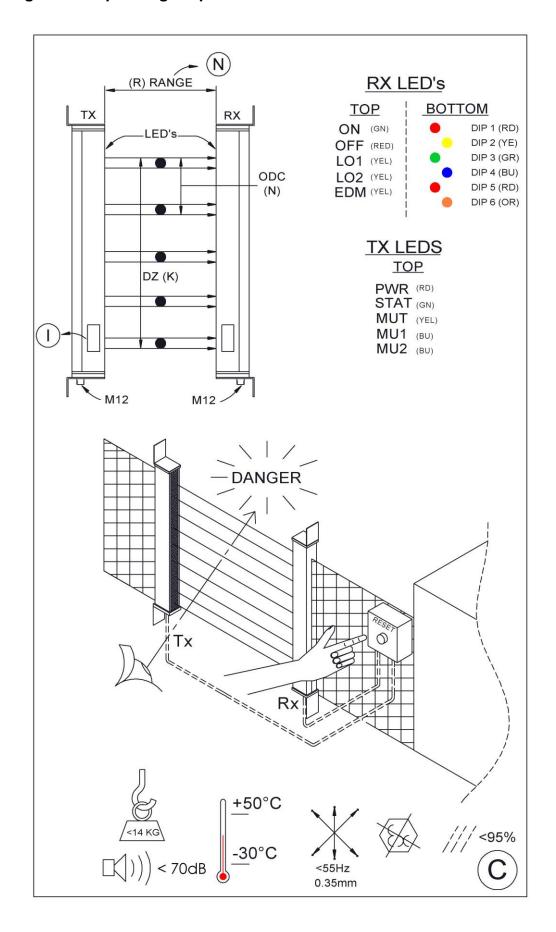

- □ Humidity <95%
- □ Temperature range between -30°C and +50°C
- □ Vibration: Frequency <55Hz Max. Movement <0.35mm
- □ Do not use equipment in explosive atmospheres (contact the manufacturer for further advice).
- Noise generated by the equipment will never exceed 70 dB

Heaters

The T4 (053B) series includes a heater system as standard. The heaters are activated when the temperature drops below 0°C and automatically switch off when the temperature rises above it again.

Detection Zone width (DZ) (K)

The detection zone width or protected height must be of a suitable size for each application to prevent personnel access to the danger area. This can be over, under or around the light curtains detection zone.

Object Detection Capability (ODC) (N)

The minimum size of object guaranteed to be detected when placed in the light curtain's infrared sensing field. A test piece of appropriate size is provided to test that the light curtain object detection capability is within the parameter specified for the particular model number. Transparent objects are not detected.

Range (R)

This is the maximum scanning range of the light curtain between the Transmitter (TX) head and Receiver (RX) head. Ensure the light curtain is capable of satisfying the range requirement for the particular application it is being used for.

Reset Location

Reset devices must be located such that the danger area can be seen to be clear of persons before the system is activated. The reset device should not be accessible from inside the danger area.

CD354/220116 4 Smartscan Ltd

Status Indicators

LEDs for status indication and diagnostics are located in the top of the Transmitter (TX) head and Receiver (RX) head. In addition the Receiver (RX) head has six LEDs at the bottom located inside the housing to aid DIP switch setting. To aid configuration each DIP switch has a corresponding colour LED to acknowledge activation of the individual DIP switch.

Receiver (RX) Top

ON – GREEN LED on = OSSDs in the on state

OFF – RED LED on = OSSDs in the off state

LO1 (Lockout 1) – YELLOW LED on = OSSD fault

LO2 (Lockout 2) – YELLOW LED on = Mute disparity fault (MU1 & MU2)

EDM (External Device Monitoring) – YELLOW LED on = EDM on

Receiver (RX) Bottom

LEDs located on the DIP switch board are accessed via a cap on the side of the extrusion. (Ensure that the cap is securely in place to maintain IP integrity after use). They are used to show the status of each individual DIP switch. LED on equals DIP switch in the 'ON' position, LED off equals DIP switch in the 'OFF' position.

DIP switch 1 = Red LED

DIP switch 2 = Yellow LED

DIP switch 3 = Green LED

DIP switch 4 = Blue LED

DIP switch 5 = Red LED

DIP switch 6 = Orange LED

Transmitter (TX) Top

PWR (Power) - RED LED on = Power connected

STAT (Status) - GREEN LED on = Alignment ok

MUT (Muted) – YELLOW LED on = Muted


MU1 (Mute1) – BLUE LED on = Mute 1 on

MU2 (Mute2) – BLUE LED on = Mute 2 on

CD354/220116 5 Smartscan Ltd

Figure D - Important Installation Considerations

- 1. Consider reflective surfaces that may give rise to an optical 'short circuit' from the direct path of the safety light curtain's infrared beams as shown in the first illustration of Fig. E. To ensure the safety light curtain is mounted far enough away from reflective surfaces use the formula provided to calculate the minimum distance (X) between the light curtain and reflective surface.
- 2. To prevent intermittent tripping of the safety light curtain ensure that extraneous infrared energy between 800 and 1000 nanometres is not directed towards the Perspex window of the receiver unit (RX). Extraneous sources would include infrared

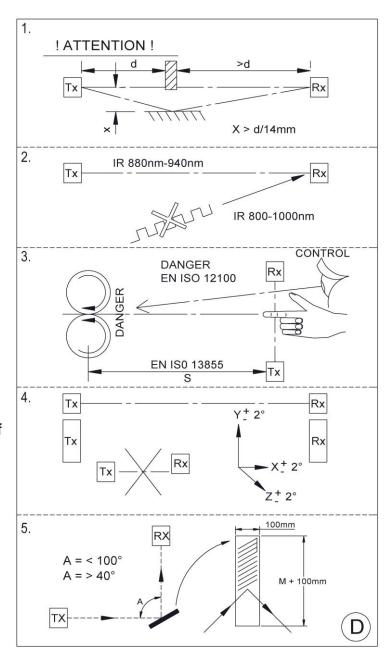

sensors, infrared remote controls, scanning systems or sunlight.

3. Ensure the mounting position of the safety light curtain in respect to the nearest danger point meets the requirements of European Standard ISO 13855. The Separation distance of the safety light curtain from the danger point of the machine must be met at all times for safe operation. In order for the machine to be guarded by the safety light curtain, the machine must be capable of stopping at any point in the machine cycle.

To prevent personnel from reaching the danger point of the machine additional mechanical guarding may be required so that any access has to be through the sensing field of the safety light curtain. The safety light curtain must be

CD354/220116 6 Smartscan Ltd

positioned so as to prevent any overreach or under reach to the danger point. It must not be possible to stand between the safety light curtain and the danger point.

The protection afforded by the safety light curtain should correspond to the machine Risk Assessment under EN ISO 12100 for the machine being guarded.

- 4. Ensure the light curtain transmitter (TX) and receiver (RX) units are mounted accurately in-line with each other and are both perpendicular and parallel to each other within the parameters shown for each axis.
- 5. If utilising mirrors to deflect the light curtain ensure the mirror length is 50mm longer at either end of the light curtain detection zone width and mounted centrally to the zone. To ensure reliable operation the light curtain deflection angle (A) from the mirror must not be less than 40 degrees or greater than 100 degrees. (See Appendix 3)


Environmental factors can affect the operation of a safety light curtain and proper consideration should be taken into account for mounting a system where fog, rain, smoke, dust, large temperature fluctuations etc. is a consideration.

Safety light curtains do not protect personnel from chemicals, heat, gases, radiation, flying parts etc. They are not a physical barrier.

The machine operators must be instructed in the use of the safety light curtain by the owner/provider of the machinery.

CD354/220116 7 Smartscan Ltd

Figure E - Electrical Connections

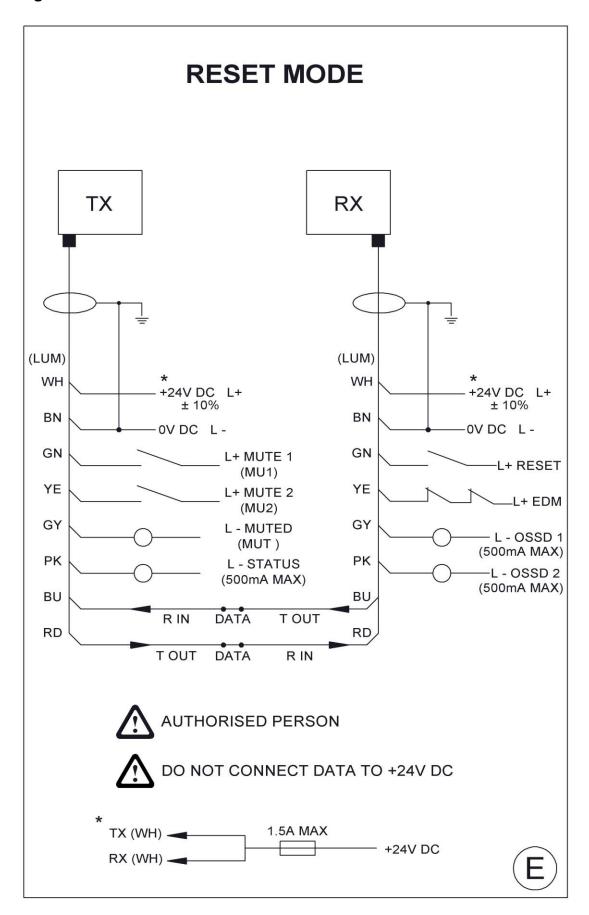

CD354/220116 8 Smartscan Ltd

Warning Do not disconnect the cables from the Transmitter (TX) or Receiver (RX) head with the power still connected to the T4 (053B) series light curtain.

Any wiring or re-wiring of the light curtain must be done with the power supply disconnected.

Any input or output signals that are not being used must be terminated to an individual isolated terminal block.

The machine must be disconnected during electrical installation to ensure no inadvertent start-up of the machine occurs.

The connection cables must not be routed with high-voltage cables, e.g. inverter cables or motor power supplies.

Power Supply

Use a regulated power supply +24V DC ±10% fused at 2A. The T4 (053B) series light curtain current consumption is rated at 1.5A. The White wire on both the Transmitter (TX) and Receiver (RX) head cables must be connected to 24V DC (L+). The Brown wire on both the Transmitter (TX) and Receiver (RX) head cables must be connected to 0V DC (L-).

Before the power supply is applied to the light curtain ensure both TX and RX heads are aligned correctly. On power up the PWR LED on the Transmitter (TX) head will turn on to indicate power is connected.

PWR - Red LED ON = Power connected

If during set-up LED LO1 and LO2 start to flash alternately this is due to the Transmitter (TX) head cable not being connected.

If the Power LED starts to flash during set-up the Receiver (RX) head cable is not connected.

Warning 0V (L-) of the power supply unit (PSU) must be connected to ground. No signal should exceed +24V DC $\pm 10\%$ (L+) or be less than 0V (L-)

Warning The shield on both the Transmitter (TX) and Receiver (RX) head cables must be connected to Earth (PE).

CD354/220116 9 Smartscan Ltd

Note: Prior to initial power up of the light curtain check the following.

If the Smartscan system is connected directly to a 24V DC source supplied by the user, it must be emphasised that the supply should be regulated and suppressed to prevent transient voltages and other forms of electrical interference from affecting correct operation of the Smartscan equipment. Ensure the 24V DC source supplied by the user has sufficient current load to satisfy the safety light curtain current consumption requirement, taking into account any other devices already connected to the PSU.

Reset

The T4 (053B) series provides a manual (latched) reset for applications where it is a requirement that the safety outputs cannot be reinstated without the operator first checking that the dangerous area is clear of personnel and therefore safe. The reset switch must also be located so that the operator cannot reset the safety light curtain from inside the danger area.

The reset switch must be a Normally Open spring-return contact block, either push button or key switch depending on the application risk assessment. The Green wire on the Receiver (RX) head cable needs to be connected to one side of the Normally Open contact block and the other side to 24V DC (L+). The safety light curtain will only reset on the trailing edge of the switch.

However for the Automatic reset function the Green wire is no longer required and must be terminated to an individual isolated terminal block.

The Automatic and Restart Interlock options are selected via DIP switches, refer to the DIP switch setting guide later in this manual.

External Device Monitoring (EDM)

An External Device Monitoring input facility is provided for monitoring the customers' external Final Switching Devices (FSD) to ensure those devices respond in unison with the safety outputs each and every time the light curtain is interrupted. Failure of the external Final Switching Device (FSD) during monitoring will not allow the safety light curtain's output OSSDs to reset.

The EDM Yellow wire on the Receiver (RX) head should be connected via a normally closed (NC) contact of the external final switching device being monitored. The other side of the contact is connected to 24V DC.

If the EDM is not being used the Yellow wire must be connected to a permanent 24V DC (L+).

A LED indicator located at the top of the Receiver (RX) head labelled as EDM shows the EDM status.

Yellow LED ON = EDM ON Yellow LED OFF = EDM OFF

CD354/220116 10 Smartscan Ltd

Safety Outputs OSSD1 and OSSD2

Two independent (PNP) electronic switching failsafe signal outputs (OSSDs) are provided for connection to the machine's stop control circuit. Interruption of the safety light curtains infrared sensing field (unless muted or blanked) will cause the OSSDs to go to an OFF state and initiate a machine stop condition. The connections are provided via the Grey wire (OSSD1) and the Pink wire (OSSD2) on the Receiver (RX) head cable.

```
Outputs ON = +24V DC (Light curtain clear)
Outputs OFF = 0V DC (Light curtain blocked)
```

The electronic outputs are monitored and rated at a maximum switching rating of 24V DC, 500mA.

LED indicators located at the top of the Receiver (RX) head labelled as ON and OFF show the status of the OSSDs.

```
Green LED ON = OSSD1 and OSSD2 active ON Red LED ON = OSSD1 and OSSD2 inactive OFF
```

If the LO1 LED on the RX head turns on it shows that the light curtain safety outputs (OSSDs) have gone to a fault condition. This means that the light curtain is in a lockout condition and will remain in this condition until the power to the light curtain is re-cycled. The lockout fault is caused by either the OSSD being shorted or the OSSD has been driven higher than the 500mA maximum specification.

Mute Function

The Mute inputs MU1 (Mute 1) Green (GN) wire and MU2 (Mute 2) Yellow (YE) wire on the Transmitter (TX) head cable are for connecting external muting signals to the T4 (053B) series safety light curtain. Both mute input signals are monitored by the light curtain and must come from separate sources, so that a single fault cannot cause a failure of the protective function.

When both mute inputs are active ON (connected to 24V DC), the light curtain will mute (*full mute or **partial mute), e.g. the light curtain's safety outputs (OSSDs) will not respond to an interruption of the muted sensing field of the light curtain.

- * Full Mute: The entire sensing region of the light curtain will mute (Default).
- ** Partial / Learn Fixed Mute: A window (specified number of beams) will be muted but the remainder of the light curtain remains active. To activate the Partial muting function it must be selected via the appropriate DIP switch settings in the Learn mode described later in the manual.

LED indicators located at the top of the Transmitter (TX) head labelled as MU1 (Mute 1) and MU2 (Mute 2) show the status.

```
MU1 - Blue LED ON = Mute 1 ON Blue LED OFF = Mute 1 OFF MU2 - Blue LED ON = Mute 2 ON Blue LED OFF = Mute 2 OFF
```

CD354/220116 11 Smartscan Ltd

Mute Output

An external electronic mute output signal is available from the Grey wire on the Transmitter (TX) head cable, mute ON = 24 V DC (500mA maximum) and mute OFF = 0 V DC. This can be used to drive an external relay for remote indication via a beacon and/or an input to a PLC.

A LED indicator located at the top of the Transmitter (TX) head labelled as MUT (light curtain Muted or Partial Muted) shows the status.

MUT - Yellow LED ON = Mute ON Yellow LED OFF = Mute OFF

Status Output

The status output is a NON-SAFETY output and should only be used for non-safety applications. E.g. connecting an indicator lamp or as feedback to a PLC. The status output is used to confirm that the safety light curtain has reset and the safety outputs (OSSDs) are ON.

The status output, Pink wire on the Transmitter (TX) head cable, energises when the safety outputs (OSSDs) = ON and de-energises when the safety outputs (OSSDs) = OFF. Status output energised = 24V DC (500mA maximum) and deenergised = 0V DC.

STAT LED on the Transmitter (TX) head will turn on to indicate that the light curtain is aligned correctly.

STAT - Green LED ON = Status ON Green LED OFF = Status OFF

Communication Link

The Transmitter (TX) and Receiver (RX) heads communicate via RS232. The Blue wire from the Transmitter (TX) head cable must be connected to the Blue wire from the Receiver (RX) head cable.


The Red wire from the Transmitter (TX) head cable must be connected to the Red wire from the Receiver (RX) head cable.

Warning The Data wires R IN and T OUT are communication links at RS232 voltage levels (+/-9V). They MUST NOT be connected to any other voltage source.

The maximum total cable length from the Transmitter (TX) head to the Receiver (RX) head must not exceed 40m.

CD354/220116 12 Smartscan Ltd

Figure F - Muting Timers

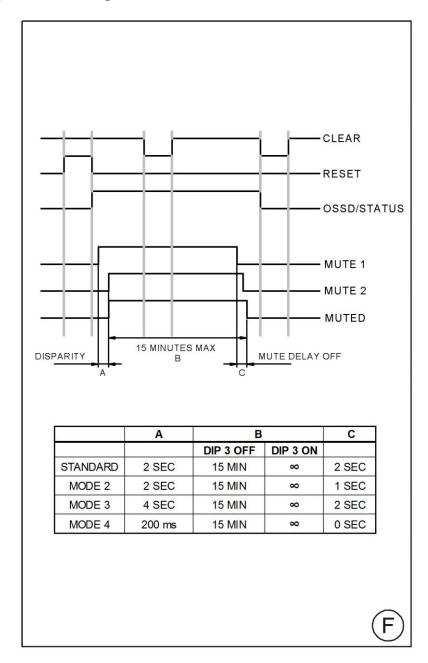

The table above shows the muting timer options for the T4 (053B) series.

The 3 timing elements of the muting function are explained below.

Mute Input Disparity Time (A)

All guards are supplied with the default mute disparity setting of 2 seconds. Both mute inputs (mute 1 and mute 2) signals must be supplied to the safety light curtain within 2 seconds of each other for the safety light curtain to go into a muted condition. If the disparity is greater than 2 seconds then the LO2 LED on the Receiver (RX) head will turn on. To remove the fault both mute inputs have to be removed and LO2 LED on the Receiver (RX) head will then turn off.

CD354/220116 13 Smartscan Ltd

Other mute beam disparity options can be selected via DIP switch modes 2, 3 and 4 in the Learn mode. E.g. Mode 4 for Press brake machine applications.

Mute Time Out Period (B)

This is the maximum pre-determined time that the safety light curtain will remain in a muted condition. The default is 15 minutes or it can be changed to infinite via DIP switch 3 in the Direct Settings mode. Use of the infinite mute time out must be subject to the detailed risk assessment.

Mute Delay Off Time (C)

This is the pre-determined time (2 second default) that the safety light curtain will remain in a muted condition following de-activation of one or both of the mute input signals. Other mute delay off options can be selected in the Learn mode.


The T4 (053B) series is supplied with the following default settings:

Mute Input Disparity Time (A) 2 seconds
Mute Time Out Period (B) 15 minutes
Mute Delay Off Time (C) 2 seconds

Partial Muting Off Fixed Beam Blanking Off Floating Beam Blanking Off

CD354/220116 14 Smartscan Ltd

Figure G - Mechanical Information

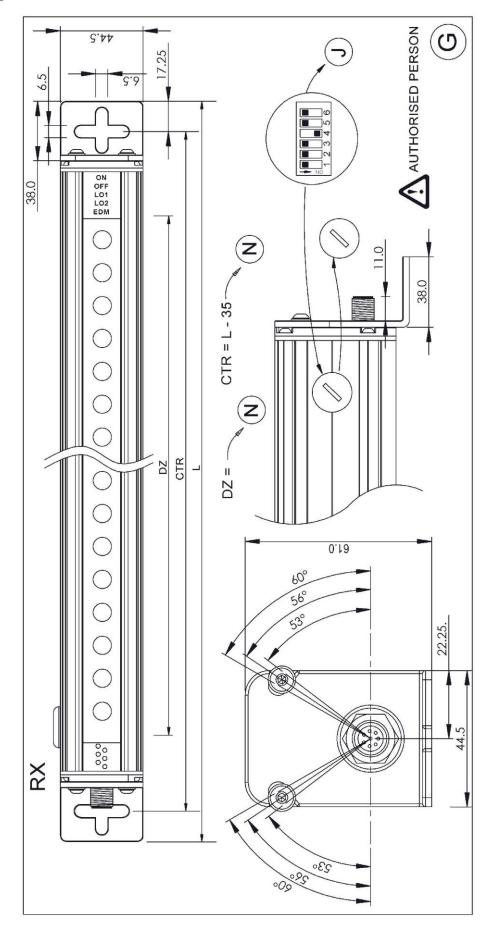

CD354/220116 15 Smartscan Ltd

The T4 (053B) series safety light curtain is supplied with mounting brackets fitted as standard. The mounting bracket may be fixed at 90 degrees, with a +/-3° adjustment, (use a 3mm Allen key) before the brackets are fully tightened.

Use 6mm bolts for mounting the safety light curtain and ensure they are fixed so as to prevent any movement.



Measurements are shown for the overall length (L) (including mounting brackets), fixing centres (CTR) and detection zone (DZ). The individual values in mm for each model are listed in Figure N of the installation guide.

The detection zone or protected height is needed to select the appropriate length to cover the access area so that any approach to the danger must be through the detection zone (infrared field).

The dimensions including the mounting bracket are overall length (L) x 48mm width x 61mm depth.



Please ensure the dip switch cover on the receiver head (RX) is securely in place to maintain the overall sealing integrity.



CD354/220116 16 Smartscan Ltd

Figure H – Floating Blanking

The table below shows the change in the Object Detection Capability (ODC) with 1, 2 and 3 beams floating blanking selected. E.g. 30mm ODC with 2 beam floating blanking will detect an object of 80mm or greater.


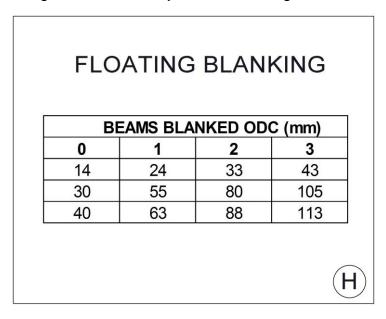



Figure I – Identification Labels

Examples are shown below of the identification labels that are affixed to the bottom of the transmitter (TX) and receiver (RX) columns.

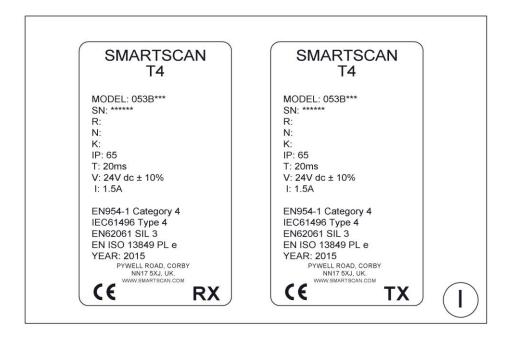


CD354/220116 17 Smartscan Ltd

Figure J – DIP Switch Settings and Operating Modes

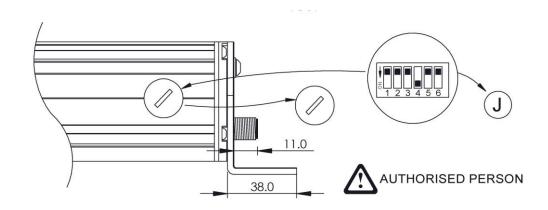

The DIP switches are located under the cap at the bottom of the Receiver (RX) column. The ON position is to the left when mounted vertically as you look into it. (Ensure that the cap is securely in place to maintain IP integrity after use).

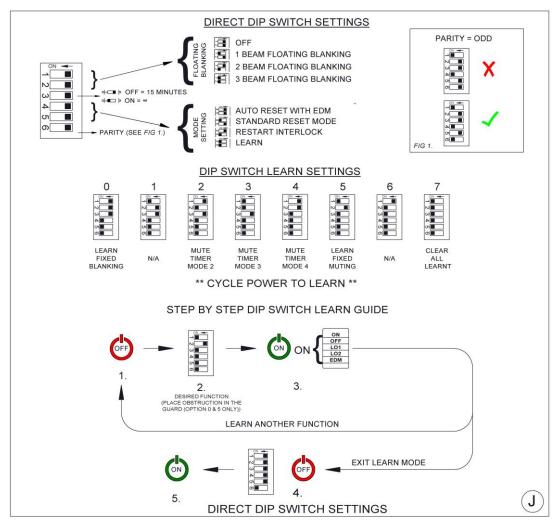

There are two modes of DIP switch setting for the T4 series:

Direct Settings Learn Settings

CD354/220116 18 Smartscan Ltd


Direct Settings

These are the functions that are available 'out of the box'. Place the DIP switches in the desired position and the functions are selected. There are four features available in the Direct Settings mode:

- 1) Floating Beam Blanking
- 2) Mute Time Out Period
- 3) Modes
- 4) Parity

Note To implement DIP switch settings or change the DIP switch settings requires the power to the light curtain to be turned off and then on again.

The diagram below shows the DIP switches for the Direct Settings mode.

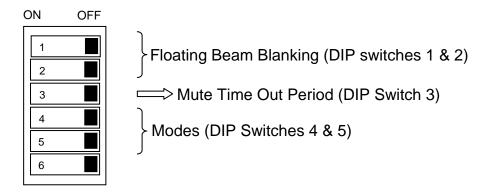


Note: If the parity or any of the DIP switches are changed while the light curtain is in operation the OSSDs (safety outputs) will turn OFF and remain OFF. All DIP switch setting must be done with the power to the light curtain disconnected. Refer to the Parity setting section.

CD354/220116 19 Smartscan Ltd


1) Floating Beam Blanking

Floating beam blanking allows the user to create a larger unprotected opening in the light curtain infrared field. The name floating beam blanking originated due to the fact that the disabled beams are not fixed at a specific location. The object can move or Float within the detection zone of the light curtain without initiating a stop signal providing the object does not interrupt more than the selected number of Floating beams.

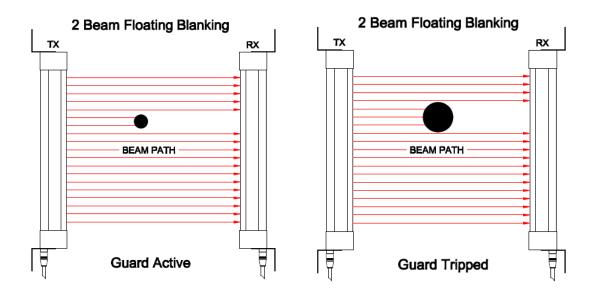

The T4 (053B) series safety light curtain will allow a specified number of beams (maximum of 3 adjacent beams) to be blocked without it sending a stop signal to the safe guarded machine. The examples above show 2 beam floating blanking in the T4 (053B) series safety light curtain. The light guard will remain active with one or two beams blocked at a single point entry in the light curtain's detection zone. If any additional beams are blocked it will trip the guard and the safety outputs will go off sending a stop signal to the safe guarded machine.

The object may also be required to move through the detection zone of the light curtain, e.g. from the top of the detection zone to the bottom of the detection zone. As long as the object does not block more than the number of beams blanked it can travel through the detection zone without tripping the guard and sending a stop signal to the machine.

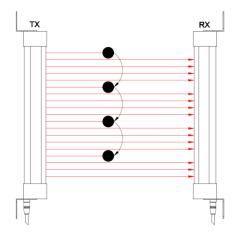


CD354/220116 20 Smartscan Ltd

There are four options,

- 1) OFF
- 2) 1 beam
- 3) 2 adjacent beams
- 4) 3 adjacent beams

These options are selectable at DIP switches 1 & 2 as shown in the diagram below in the direct settings mode.

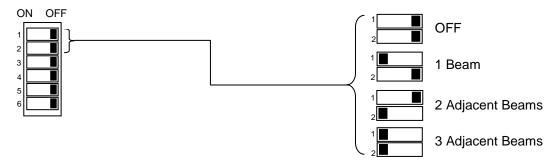

The floating blanking function is particularly useful for those applications where, for example, a work piece is moving up and down within the infrared field of the light curtain as part of the manufacturing process. This allows the operator to manipulate the work piece safely without shutting down the machine.

Using the floating beam blanking function of the T4 (053B) series safety light curtain will change the original Object Detection Capability (ODC). The table below shows the change to the original ODC (14mm, 30mm and 40mm) when using the 1, 2 or 3 beam floating blanking options.

Floating Beam Blanking (14 mm Detection Capability)				
Beams Blanked	0	1	2	3
Object Detection Capability (ODC)	14 mm	24 mm	33 mm	43 mm
Capability (ODC)				

Floating Beam Blanking (30 mm Detection Capability)					
Beams Blanked	0	1	2	3	
Object Detection	30 mm	55 mm	80 mm	105 mm	
Capability (ODC)					

Floating Beam Blanking (40 mm Detection Capability)				
Beams Blanked	0	1	2	3
Object Detection Capability (ODC)	40 mm	63 mm	88 mm	113 mm

CD354/220116 21 Smartscan Ltd

Warning Floating Beam blanking increases the size of the object that the safety light curtain can detect resulting in an increased Object Detection Capability (ODC).

When selecting 1, 2 or 3 beam floating blanking the worst case ODC should always be taken into account during the risk assessment process. Check that the position of the light curtain in relation to the nearest danger point (Separation distance) meets the requirements of European Standard ISO 13855.

Note: If the parity or any of the DIP switches are changed while the light curtain is in operation the OSSDs (safety outputs) will turn OFF and remain OFF. All DIP switch setting must be done with the power to the light curtain disconnected. Refer to the Parity setting section.

2) Mute Time Out Period

A maximum pre-determined time the light curtain will remain in a muted condition. The standard or default setting is 15 minutes. After the 15 minute mute time out period the light curtain's safety outputs (OSSDs) will turn OFF and initiate a machine stop condition. Use of the infinite mute time out must be subject to the detailed risk assessment.

There are two options


- 1) 15 minutes
- 2) Infinite

These options are selectable at DIP switch 3 in the direct settings mode.



CD354/220116 22 Smartscan Ltd

3) Modes

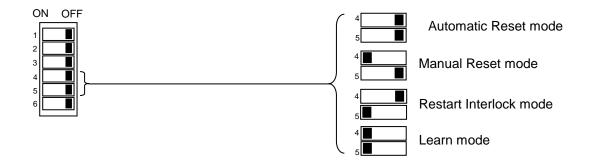

Automatic Reset mode:

After initial Power Up the light curtain's OSSDs become active (OSSDs are ON). If the light curtains sensing field is blocked the OSSDs turn OFF. Once the obstruction has been removed from the sensing field of the light curtain it automatically reactivates itself, (OSSDs turn ON).

Manual (Latched) Reset mode:

After initial Power Up the light curtain's OSSDs remain OFF until a Reset signal is applied. Once the reset signal is received, with the light curtain free of any objects, the OSSDs will turn ON. If the sensing field is interrupted, once the obstruction has been removed from the sensing field of the safety light curtain, the OSSDs will remain OFF until a reset signal is applied, upon which time the OSSDs will turn ON.

Restart Interlock mode:

At initial Power Up, with the light curtain free of any objects in the infrared sensing field, the OSSDs become active (OSSDs turn ON). If the light curtains infrared sensing field is blocked the OSSDs turn OFF. Once the obstruction has been removed from the infrared sensing field of the safety light curtain the OSSDs will remain OFF until a reset signal is applied.

Learn Settings mode:


Allows the user to access the T4 (053B) series safety light curtains additional functions. These functions include: fixed beam blanking, mute disparity options, mute delay off time options, partial or (learn fixed) muting and clear learned functions.

CD354/220116 23 Smartscan Ltd


4) Parity (ODD)

The parity switch (Position 6) is used as a functionality check for the DIP switches, making sure no DIP switch has failed. The light curtain counts how many of the 6 switches are in the ON position. This sum or number of DIP switches in the up or ON position must be an odd number. If the number is not odd then the safety light curtain's OSSDs will remain OFF. Listed below are 2 examples of setting the parity to ODD.

Example 1

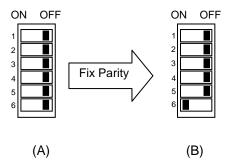

Example 2

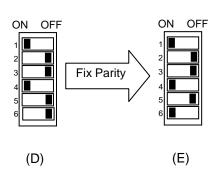

Example 1

Zero DIP switches are in the ON position (A). Zero is not an ODD number. **The OSSDs will remain OFF** until the parity switch is moved to the ON position (B).

Example 2

Two DIP switches are in the ON position (D). Two is not an ODD number. **The OSSDs will remain OFF** until the parity switch is moved to the ON position (E).


If the number of switches at positions 1 to 5, in the on position, equals an even number then the parity switch, position 6, must be set to the ON position. If the number of switches in the on position equals an odd number then parity switch, position 6, must be in the off position. Having set the switches in this way, if any switch subsequently fails, either on or off, the parity will go to an even number and the fault will be detected.

Note If the parity check is set incorrectly, changed or any of the DIP switches are changed while the light curtain is in operation the OSSDs (safety outputs) will turn OFF and remain OFF.

CD354/220116 24 Smartscan Ltd

Learn Settings

The 6 DIP switch settings available in Learn Settings are shown in the diagram below.

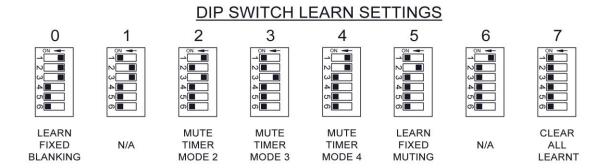


Warning The two hard-wired mute input connections to the light curtain must be disconnected when using the Learn mode.

Note During this time the safety outputs (OSSDs) will remain in the off state.

Learn Setting 0 - Fixed Beam Blanking

Fixed beam blanking allows the user to deselect a fixed area of beams in the light curtain's sensing field. This is typically used where the application environment dictates that a stationary object or fixture is causing a permanent obstruction within a portion of the sensing field.

The remaining unobstructed area of the light curtain's sensing field remains active (protecting). If something blocks the active part of the sensing field it will cause the safety outputs (OSSDs) to go to an OFF state and initiate a machine stop condition.

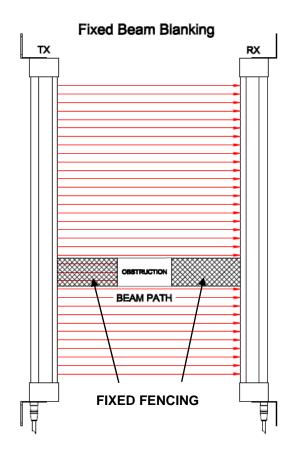

CD354/220116 25 Smartscan Ltd


Warning If the fixed object located in the sensing region does not completely cover the light curtains sensing region additional guarding will be required.

Note Once the fixed blanking area has been set any removal of the object in that region will cause the safety light curtain's OSSDs to go into an OFF state and stay OFF.

Note Three beams must remain un-blanked in the sensing field of the safety light curtain, if not the OSSDs remain in the OFF state.

Note If using the fixed beam blanking and the partial / fixed muting functions then the fixed beam blanking function must be selected first.

Use the following steps to configure Fixed Beam Blanking:

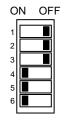

Fixed Beam Blanking

- 1. Disconnect power to the light curtain.
- 2. Configure the DIP switches as per the diagram to the left (Learn mode / Fixed beam blanking).
- 3. Place the obstruction in the light curtain or the obstruction is already in place.
- 4. Reinstate power to the light curtain. All LEDs on the RX head are on to indicate that the number of beams to be blanked has been learnt.
- 5. Disconnect power to the light curtain.
- 6. Set DIP switches as per the Direct Setting requirements.
- Reinstate power to the light curtain. All LEDs revert back to their normal functions and the blocked beams are ignored.

You may want to select another Learn mode function in which case you will need to follow the procedure for that function.

CD354/220116 26 Smartscan Ltd

Learn Setting - 1

Not applicable (do not select).

Learn Setting 2 - Mute Timer (Mode 2)

Mode 2 gives the following mute timers:

Mute input disparity 2 seconds Mute delay off 1 second

Use the following steps to configure Mute Timer mode 2:



Mute Timer (Mode 2)

- 1. Disconnect power to the light curtain.
- 2. Configure the DIP switches as per the diagram to the left (Learn mode / Mode 2).
- 3. Reinstate power to the light curtain. All LEDs on the RX head are on to indicate that mode 2 has been learnt.
- 4. Disconnect power to the light curtain.
- 5. Set DIP switches as per the Direct Setting requirements.
- 6. Reinstate power to the light curtain. All LEDs revert back to their normal functions and Mute Timer (Mode 2) is now activated.

You may want to select another Learn mode function in which case you will need to follow the procedure for that function.

CD354/220116 27 Smartscan Ltd

Learn Setting 3 - Mute Timer (Mode 3)

Mode 3 gives the following mute timers:

Mute input disparity 4 seconds Mute delay off 2 second

Use the following steps to configure Mute Timer (Mode 3):



Mute Timer (Mode 3)

- 1. Disconnect power to the light curtain.
- 2. Configure the DIP switches as per the diagram to the left (Learn mode / Mode 3).
- 3. Reinstate power to the light curtain. All LEDs on the RX head are on to indicate that mode 3 has been learnt.
- 4. Disconnect power to the light curtain.
- 5. Set DIP switches as per the Direct Setting requirements.
- 6. Reinstate power to the light curtain. All LEDs revert back to their normal functions and Mute Timer (Mode 3) is now activated.

You may want to select another Learn mode function in which case you will need to follow the procedure for that function.

Learn Setting 4 - Mute Timer (Mode 4)

Mode 4 gives the following mute timers:

Mute input disparity 200 milliseconds (ms)
Mute delay off 0 seconds

Use the following steps to configure Mute Timer (Mode 4):




Mute Timer (Mode 4)

- 1. Disconnect power to the light curtain.
- 2. Configure the DIP switches as per the diagram to the left (Learn mode / Mode 4).
- 3. Reinstate power to the light curtain. All LEDs on the RX head are on to indicate that mode 4 has been learnt.
- 4. Disconnect power to the light curtain.
- 5. Set DIP switches as per the Direct Setting requirements.
- 6. Reinstate power to the light curtain. All LEDs revert back to their normal functions and Mute Timer (Mode 4) is now activated.

You may want to select another Learn mode function in which case you will need to follow the procedure for that function.

Learn Setting 5 - Partial or Learn Fixed Muting

In the standard mute function, Mute 1 and Mute 2 inputs are used to enable the entire light curtain sensing field to be in a MUTED condition. The Partial muting function also uses mute 1 and mute 2 but in addition it allows the user to define a specified area, number of beams, of the light curtain to be muted. This can improve the safety by allowing a specific product to pass through the muted area while the rest of the sensing field remains active.

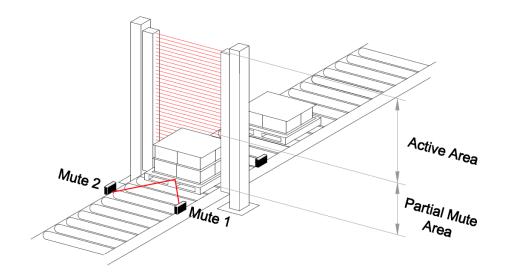

Use the following steps to configure Partial Muting:



Partial Muting

- 1. Disconnect power to the light curtain.
- 2. Configure the DIP switches as per the diagram to the left (Learn mode / Partial muting).
- 3. Place the obstruction (product load) in the light curtain.
- 4. Reinstate power to the light curtain. All LEDs are on to indicate that the number of beams to be muted has been learnt.
- 5. Disconnect power to the light curtain.
- 6. Set DIP switches as per the Direct Setting requirements.
- 7. Reinstate power to the light curtain. All LEDs revert back to their normal functions. During the mute function only the selected beams will be ignored.

You may want to select another Learn mode function in which case you will need to follow the procedure for that function.

Note If using the fixed beam blanking and the partial / fixed muting functions then the fixed beam blanking function must be selected first.

CD354/220116 29 Smartscan Ltd


Learn Setting - 6

Not applicable (do not select).

Learn Setting 7 - Clear All Learnt

Clears all functions applied in the Learn mode, returning the system to its original factory settings.

Use the following steps to clear any learnt functions selected:

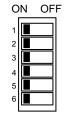

Clear (All Learned settings)

- 1. Disconnect power to the light curtain.
- 2. Configure the DIP switches as per the diagram to the left.
- 3. Reinstate power to the light curtain. All LEDs on the RX head are on to indicate that the Clear mode is active and all learnt functions have now been cleared.
- 4. Disconnect power to the light curtain.
- 5. Set DIP switches as per the Direct Setting requirements.
- 6. Reinstate power to the light curtain. All LEDs revert back to their normal functions and the original factory default settings are applied.

CD354/220116 30 Smartscan Ltd

Figure K - Test and Maintenance

Testing the safety light curtain with the test piece

The test procedure should be carried out frequently as indicated by the risk assessment for the particular installation.

A test must be carried out at the initial installation and prior to the machine startup.

Smartscan Ltd recommends the test should be carried out daily.

Any changes to the configuration of the safety light curtain must be followed by testing to check the system is still working correctly.

Regular function checking of the safety light curtain as well as at initial installation is required as part of the test and maintenance process.

The operating instructions for the safety light curtain and machine must be

ATTENTION TEST & **MAINTENANCE** = ODC > 150mm ODC DIMENSIONS 053B1** = 14mm 053B3** = 30mm 053B4** = 40mm V MAX = 2.5 m/s053B6** = 50mm

made available for the operator and those responsible for installation, maintenance and safety control at all times.

To test the safety light curtain power it up and activate the output switching circuits (OSSDs) to an ON condition.

Insert a test piece of appropriate size into the light curtain detection zone, at the bottom, 150mm from the transmitter unit. At this point the output switches will turn OFF. Sweep the test piece up through the detection zone parallel to the transmitter. Now sweep the test piece down through the detection zone equal distance between the transmitter and receiver. Now sweep the test piece up through the detection zone 150mm and parallel to the receiver unit. At no time during these tests should the output switches turn ON.

CD354/220116 31 Smartscan Ltd

Now thrust the test piece anywhere in the light curtain detection zone and ensure the machinery stops without apparent delay.


Warning The machine shall not start whilst the test piece is blocking the Detection Zone (K) of the light curtain. This is acknowledged by the RED indicator in the on-state and Green indicator in the Off-state. The machine shall remain in the stopped condition and/or prevent the machine from restarting. If it does then machine MUST be isolated until the reason has been investigated.

For light curtain models with an ODC above 40mm undertake the same tests as described. During these tests the output switches should only turn OFF as the test piece totally obscures each beam in the light curtain. Ensure that while the test piece is obscuring each beam the output switches are OFF.

Maintenance

The Transmitter (TX) and Receiver (Rx) windows should be cleaned regularly as indicated on the Installation Sheet, Figure L.

Dirt build-up or scratching on the windows may lead to intermittent tripping or a totally blocked condition of the light curtain. Clear adhesive tape may be applied to the windows of curtains in dirty or abrasive conditions. Renew the clear adhesive tape periodically.

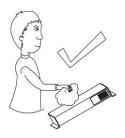

Dust particles can be attracted to the Perspex window due to static charges. This can be prevented by the use of an antistatic plastic cleaner and antistatic cloth.

Clean the windows with a clean damp cloth using a mild detergent. Never use abrasive, corrosive cleaners or spray detergents.






During the maintenance inspection of the safety device and the danger area checks include, damage and general wear, connection cables and the electrical connections, mountings and physical extrusion and Perspex. See also the Operation Cycle checks within this document.

Warning There must not be any means of accessing the danger point without interruption to the infrared field of the safety light curtain.

CD354/220116 32 Smartscan Ltd


Figure L - Operation Cycle

- Before installation read and understand the Installation Sheet provided paying particular attention to the information provided in Fig. D
- Refer to Fig. K for test and maintenance procedures
- Every 24 hours carry out tests as indicated in Fig. K
- Every 6 months check the entire installation paying particular attention to Fig. D
- If the equipment fails to operate as intended check the electrical connections as shown in Fig. E

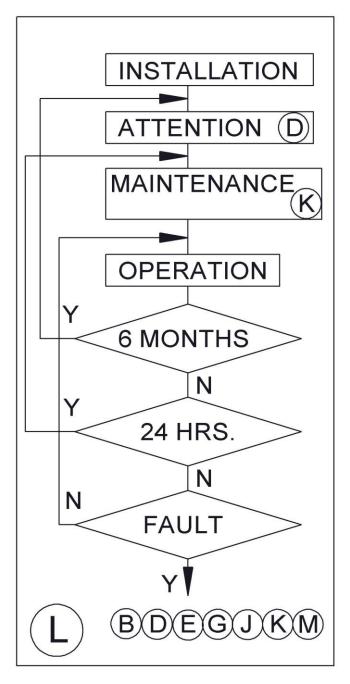

CD354/220116 33 Smartscan Ltd

Figure M – Product Return Procedure

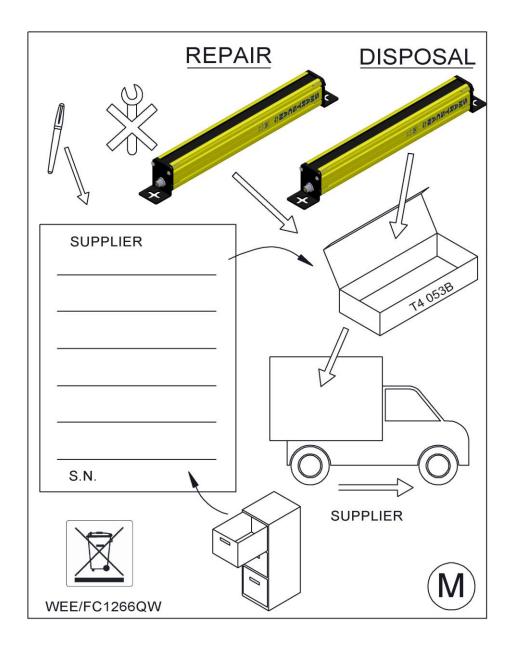

If a fault occurs that cannot be resolved or the equipment is damaged return the equipment to the nearest Smartscan distributor or Smartscan Ltd. Indicate the nature of the fault and the symptoms displayed on the form provided.

Note Please ensure that returned guards (Transmitter and Receiver heads) are matching serial number pairs.

CD354/220116 34 Smartscan Ltd

Figure N – Model List

Fig. M shows the T4 (053B) series safety light curtain model numbers with their corresponding number of Infrared beams, detection zone width (DZ), fixing centres (CTR), overall length (L), and object detection capability (ODC). A list of the operating ranges for the different model numbers is also provided.

T4 053B SERIES MODEL LIST

Model 14mm ODC	Beams	CTR mm	DZ mm	L mm
053B101	16	265	158	300
053B102	32	415	308	450
053B103	48	585	458	600
053B104	64	715	608	750
053B105	80	865	758	900
053B106	96	1015	908	1050
053B107	112	1165	1058	1200
053B108	128	1315	1208	1350

Model 30mm ODC	Model 40mm ODC	Beams	CTR mm	DZ mm	L mm
053B301	053B401	6	265	174	300
053B302	053B402	12	415	324	450
053B303	053B403	18	565	474	600
053B304	053B404	24	715	624	750
053B305	053B405	30	865	774	900
053B306	053B406	36	1015	924	1050
053B307	053B407	42	1165	1074	1200
053B308	053B408	48	1315	1224	1350
053B309	053B409	54	1465	1374	1500
053B310	053B410	60	1615	1524	1650
053B311	053B411	66	1765	1674	1800
053B312	053B412	72	1915	1824	1950
053B313	053B413	78	2065	1974	2100
053B314	053B414	84	2215	2124	2250
053B315	053B415	90	2365	2274	2400
053B316	053B416	96	2515	2424	2550

Model	DZ mm	CTR mm	L mm	Range
053B605	600 (2 x 6 Beams)	715	750	0.5 - 6 m
053B606	900 (3 x 6 Beams)	1015	1050	0.5 - 6 m
053B607	1200 (3 x 6 Beams)	1315	1350	0.5 - 6 m
053B608	1500 (4 x 6 Beams)	1615	1650	0.5 - 6 m
053B609	1800 (9 x 6 Beams)	1915	1950	0.5 - 6 m
053B610	2100 (10 x 6 Beams)	2215	2250	0.5 - 6 m
053B611	2400 (11 x 6 Beams)	2515	2550	0.5 - 6 m
053B622	1800 (5 x 6 Beams)	1915	1950	0.5 - 6 m
053B623	2100 (5 x 6 Beams)	2215	2250	0.5 - 6 m
053B624	2400 (6 x 6 Beams)	2515	2550	0.5 - 6 m

Model	DZ mm	CTR mm	L mm	Range
053B612	600 (2 x 6 Beams)	715	750	3 - 15 m
053B613	053B613 900 (3 x 6 Beams)		1050	3 - 15 m
053B614	1200 (3 x 6 Beams)	1315	1350	3 - 15 m
053B615	1500 (4 x 6 Beams)	1615	1650	3 - 15 m
053B616	1800 (9 x 6 Beams)	1915	1950	3 - 15 m
053B617	2100 (10 x 6 Beams)	2215	2250	3 - 15 m
053B618	2400 (11 x 6 Beams)	2515	2550	3 - 15 m
053B619	1800 (5 x 6 Beams)	1915	1950	3 - 15 m
053B620	2100 (5 x 6 Beams)	2215	2250	3 - 15 m
053B621	2400 (6 x 6 Beams)	2550	2550	3 - 15 m

MODEL	LENGTH
051-005	Interconnect Cable - 5m
051-010	Interconnect Cable - 10m
051-020	Interconnect Cable - 20m

Model	Range
053B1**	0.5 - 4M
053B3**	0.5 - 6M
053B4**	3 - 15M

053BXXX G = 'G' Software being used



CD354/220116 35 Smartscan Ltd

Figure O - Declaration of Conformity



CD240(O)/181214

EC Declaration of Conformity

Product: Smartscan T4 Light Curtain

Manufacturer: Smartscan Limited, Pywell Road, Willowbrook Industrial Estate,

Corby, Northamptonshire, NN17 5XJ, ENGLAND

Declares that the safety component(s) described serial numbers between 805 000 - 899 999 and T4 0001 -T4 9999, fulfils the following safety function: Electro-sensitive protective equipment – Active Opto-electronic Protective Device (safety light curtain).

Conforms to the following Directives:

Machinery Directive 2006/42/EC Electromagnetic Conformity Directive 2004/108/EC 2006/95/EC Low Voltage Directive

Complies with the relevant requirements of the following Standards:

Type 4 SIL 3 EN 61496-1, EN 61496-2 IEC 62061 EN ISO 13849-1 PL e

Uses the following standards:

EN ISO 12100, EN 60204-1

Complies with the examples to which the EC type examination certificate below relates, and is in conformity with the protection requirements of Council Directive 2004/108/EC, as amended, on the approximation of the laws of the Member States relating to electromagnetic compatibility.

The component is of a type listed in Annex IV of the Machinery Directive. Examples have been submitted for type examination by the approved body identified below.

Safenet Limited Notified Body Number 1674

Address Denford Garage, Denford, Kettering, Northamptonshire, NN14 4EQ.

Certificate No. 4000051114

Signed:

Date: 18. 12. 2014

Technical Director Title:



CD354/220116 36 Smartscan Ltd

Figure P – Glossary of Words and Language Translation

DIBLIGGINALIE	DUTCH	ACTIVEREN	1	T	ZWART	ONDERBROKEN	BLAUW	BRUIN	KABEL	VRIJIVEILIG	SLUITEN	BESTURING	GEVAAR	DETECTIEVERMOGEN	ACTIVEREN	NOODSTOP	FOUT	EIGENSCHAP	GROEN	GRIJS	INDICATOR	INGANG	LICHTSCHERM	ONDERHOUD	MODUS	MODEL	MODULE	MAANDEN	UT	AAN	OPEN	INBEDRIJF	ORANJE	UITGANG	ROOS	ONTVANGER	STANDAARD	RELAIS	ROOD	HERSTART	VELLIGHEID	AARDING	STATUS	LEVERANCIER	TEST	ZENDER	VIOLET	GEEL	BEWAAKT	DIAGONALE - STRALEN
ONDERGO	DANSK	AKTIVERE	ATTENTION	PERSON MED AUTORITE	SORT	BLOK	BLA	BRUN	KABEL	KLAR	LUKKE	KONTROL	FARE	OPLOSNING	MULIG	F-STOP	FEJI	MULIGHEDER	GRON	GRA	INDIKATION	INDGANG	LYSGITTER	VEDLIGEHOIDE	MODE	MODEL	MODUL	MANED	SLUKKE	TAENDE	ABEN	OPERATION	ONEBSTYDE	UDGANG	LYSEROD	MODTAGER	KLASSIFICERING	RELAE	ROD	GENSTART	AIKKERHED	SKAERM	STATUS	LEVERANDOR	TEST	SENDER	VIOLET	GUL	CHEXK	KRYDS STRALE
ORDEISTA	SVENSKA	ACTIVERING	OBSERVERA	BEHORIG PERSON	SVART	BLOCKERA	BLA	BRUN	KABEL	KLAR	NARA	KONTROLL	FARA	UPPLOSNING	MOJLIGGOR	NODSTOPP	FEL	EGENSKAPER	GRON	GRA	INDIKERING	INGANG	I IIIS BARRIER	UNDERHALL	FUNKTIONSLAGE	MODELL	MODUL	MANADER	FRAN	TILL	OPPEN	DRIFT	ORANGE	UTGANG	ROSA	MOTTAGARE	KLASSIFICERING	RELA	ROD	ATERSTART	SAKERHET	SKARM	STATUS	LEVERANTOR	PROV	SANDARE	VIOLETT	GUL	OVERVAKANDE	KRYSS-STRALAR
GLUSARIO	ESPAGNOL	ACTIVAR	ATENCION	PERSONA AUTORIZADA	NEGBO	BLOQUE	AZUL	MARRON	CABLE	CLARO	CERCA	CONTROLAR	PELIGRO	CAPACIDAD DE DETECTION	CISPOSICION	PARO DE EMERGENCIA	INCIDENTE	CARACTERISTICA	VERDE	GRIS	INDICADOR	ENTRADA	CORTINA DE SECURIDAD	MANTENIMIENTO	MODO	MODELO	MODULO	MESES	MOIE		ABIERTO	OPERACION	NARANJA	SALIDA	ROSA	RECEPTOR	GRADO	RELE	ROJO	REINICIAI IZER	SEGURIDAD	MALLA	ESTADO	PROVEEDOR	TEST	TRANSMISOR	VIOLETA	AMARILLO	EL VIGILAR	CHECK
GLUSSARIO	IANO		\forall	WALE AUTORIZZATO	MEDO	ATO		RONE		LIBERO	CHIUSO	0		RISOLUZIONE		MERCENZA	T	RISTICA			ų.		RAPPIEPA OTTICA	Ī			07		NON ATTIVO	ATTIVO	APERTO	FUNZIONAMENTO	ARANCIO		ROSA	RICEVITORE	CLASSIFICAZIONE		ROSSO	RIAWA	SICUREZZA	SCHERMO	STATO	FORNITURE	PROVA	EMETTITORE	VIOLA	GIALLO	SORVERGIJANZA	RAGGI INCROCIATI
GLUSSAR	DEUTSCHE	AKTIVIEREN	ACHTUNG	AUTORISIERTE PERSON	SCHABIT	UNTERBRECHEN	BLAU	BRAUN	KABEL	FREI	SCHLIESSEN	AUSWERTEGRAET	GEFAHR	AUFLOESUNG	MITTERNEN MITTERNEN	NOTSTOP	FEHLER	EIGENSCHAFT	GRUN	GRAU	ANZEIGE	EINGANG	INSTALLATION	WARTUNG	BETRIEBSART	TYP	MODUL	MONATE	AllS	EN	OFFEN	IN BETRIEB	ORANGE	AUSGANG	ROSA	EMPFANGER	KLASSE	RELAIS	ROT	MIEDERANI ALIESDEDRE	SICHERHEIT	ERDFABEN	STATUS	LIEFERANT	PRUEFUNG	SENDER	VIOLETT	GELB	LIRERWACHING	KREUZ STRAHL
GLUSSAIRE	FRANCAIS	ACTIVER	ATTENTION	PERSONNE AUTORISEE	FAISCEAUX	BLOQUER	BLEU	MARRON	CABLE	SECURITE	FERME	CONTROLE	DANGER	CAPACITE DE DETECTION	DISPOSITION	ARRET D'I IDGENCE	DEFAUT	DISPOSITIF	VERT	GRIS	INDICATEUR	ENTREE	RADDIEDE	ENTRETIEN	MODE	MODELE	MODULE	MOIS	OFFICESSION	NO	OUVERT	OPERATION	ORANGE	SORTIF	ROSE	RECEPTEUR	ESTIMATION	RELAIS	ROUGE	PEDEMADDAGE	SECURITE	TERRE	STATUT	FOURNISSEUR	ESSAI	EMETTEUR	VIOLET	JAUNE	SLIPVELLENT	RAYONS DIAGONALE
GLUSSARY	NGLISH			RISED PERSON		BLOCK			CABLE		CLOSE		- 1	N CAPABILITY	DISPOSAL FNARI F			RE			TOR		INSTALLATION			MODEL		ş	MUTE		OPEN	_	ORANGE			IVER		>		REPAIR				α.		IITTER		>	MONITORING	

CD354/220116 37 Smartscan Ltd

Appendix 1 – **Important Safety Information**

- □ Ensure that the Smartscan safety light curtain is installed by a competent person using the installation information provided.
- Smartscan safety light curtains are supplied as matching serial number pairs and must be used as matching serial number pairs.
- It is the responsibility of the employer that the safety light curtain is properly installed, operated and maintained as well as the suitable machinery on which the safety product is installed. All the applicable national and international legislation and technical standards for the corresponding machine application must be complied with.
- □ The safety light curtain is only one element in the overall machine safety circuit, the whole machine safety control circuit must be a fail-safe design.
- □ The stopping elements of the machine should be regularly checked to make sure the machine stop time performance is reliable and within the specified parameters.
- Do not repair or modify the Smartscan safety light curtain. Smartscan products can only be repaired by the manufacturer. Any work carried out on the product that is not done by the manufacturer will invalidate the warranty terms. All products being returned for repair must be matching serial number pairs.
- □ The Smartscan Product installation sheet and installation guide do not provide instruction or operation information for the machine that it is integrated to.
- □ The Smartscan Product Installation instructions should be kept with the safety light curtain during its entire working life.

CD354/220116 38 Smartscan Ltd

Appendix 2 - Certifications

Company



ISO 9001 FM27829

Smartscan Limited has a certified quality assurance system in compliance with ISO 9001-2008. Certificate number FM27829.

Products





Smartscan safety light curtains are developed and manufactured in compliance with the European Machinery Directive 2006/42/EC and International Legislation and Standards. Smartscan products are Third Party approved by the Notified Body Safenet Limited, Notified Body number 1674.

Appendix 3 - Mirrors


Reflector mirrors can be provided enabling two or three sides of a machine to be safeguarded with, what is effectively a single light curtain.


When mirrors are employed it is essential that the mounting of the transmitter unit, receiver unit and mirrors themselves are sufficiently rigid. Alignment becomes increasingly critical as the range and number of mirrors increase. Mirrors cause a reduction in optical efficiency, reducing the effective range. A guide to the practicality of using mirrors is given below.

Range of the	Maximum range	Maximum range
light curtain	through 1 mirror	through 2 mirrors
3m – 15m	11m	8m

Total Light Path	1 Mirror	2 Mirror					
3m	Easy	Easy					
6m	Easy	Medium					
8m	Medium	Hard					
11m	Hard	Not Feasible					

Based upon a 053B612

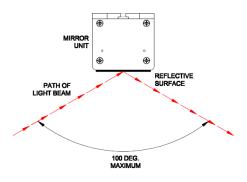

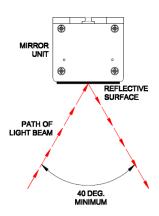

The angle of the infrared beams from the light curtain striking the reflective surface must be within defined limits as per the drawings above. See Fig. D in this guide.


Note The mirror length must be a minimum of 100mm longer than the detection zone (K) of the light curtain to be installed e.g. 50mm above and 50mm below either end of the light curtains detection zone (K).

Perimeter curtains will be easier to align, curtains over 900mm may be more difficult to align. Check with the Smartscan technical department prior to ordering for a particular application, support@smartscan.com, Tel: +44 (0) 1536 401 313, Fax: +44 (0) 1536 268 954

CD354/220116 40 Smartscan Ltd

Alignment though one mirror


intended to be used.

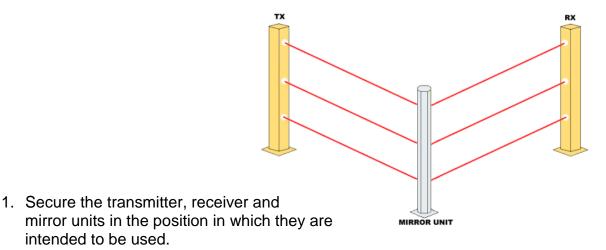

- 2. Ensure all units are perfectly upright in all planes by using a sprit level.
- 3. If the units are floor mounted on stands ensure the floor is even. Shim the floor mounts if necessary to ensure the units are all upright.
- 4. With one eye looking over the top of the receiver unit in line with the centre of the extrusion look towards the reflective surface of the mirror, in a similar manner to looking through a gun sight.
- 5. A second person must adjust the mirror to the left and right until the Perspex window of the transmitter unit can be seen reflected in the mirror.
- 6. If the light curtain is scanning over a long range it may be difficult to see the reflection of the transmitter units Perspex window in the mirror. If so, cut a piece of white paper to the size of the Perspex window and mount directly in front of the window. Now repeat step 5.
- 7. If the reflection of the white paper is difficult to see in the mirror then employ a third person to hold a flashlight in front of the transmitter unit with the light beam pointing directly in line with the Perspex window towards the mirror. Now repeat step 5.
- 8. Use shims to ensure the mirror is accurately aligned to enable the infra red beams in the light curtain to reach the receiver. Alternatively, fabricate mirror mountings to include some form of adjustment to enable movement both left and right and also forward and backwards from the central axis of the mirror.

CD354/220116 Smartscan Ltd 41

Alignment though two mirrors

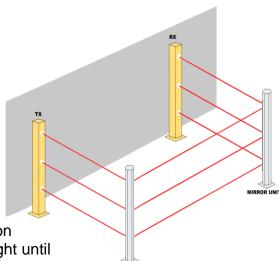


- 9. Follow instruction 1-4
- 10. A second person must adjust the position of the first mirror to the left and to the right until the entire length of the second mirror is reflected in the first mirror. If difficulties are experienced in seeing the reflection on the second mirror in the first mirror then use a piece of white paper cut to size and position in front of the second mirror.
- 11. If the reflection of the white paper is difficult to see in the first mirror then employ a third person to hold a flashlight in front of the second mirror with the light beam pointing directly in line with its mirror housing towards the first mirror. Secure the first mirror.
- 12. Again follow instructions 1 to 4.
- 13. The second person must adjust the position of the second mirror to the left and to the right until the entire length of the transmitter unit is reflected through both the first mirror and the second mirror. If difficulties are experienced in seeing the reflection of the transmitter unit through both the first then the second mirrors then use a piece of white paper cut to size and position in front of the transmitter unit.
- 14. If the reflection of the white paper is still difficult to see through the first and second mirrors then employ a third person to hold a flashlight in front of the transmitter unit with the light beam pointing directly towards the second mirror. Secure the second mirror.
- 15. Ensure the mirrors are directly aligned thus enabling the infra- red beams of the transmitter to reach the receiver. Alternatively, fabricate mirror mountings to include some form of adjustment to enable movement both left and right and also forwards and backwards from the central axis of each mirror.

CD354/220116 42 Smartscan Ltd

16. Now turn on the power to the light curtain and check that the green LED beam indicator, mounted on the receiver unit is 'on'. If not, it may be necessary to finely adjust each mirror in turn to ensure the infra-red energy from the transmitter unit is being reflected through the mirror(s) to the corresponding receiver unit.

Alignment of the light curtain using mirrors

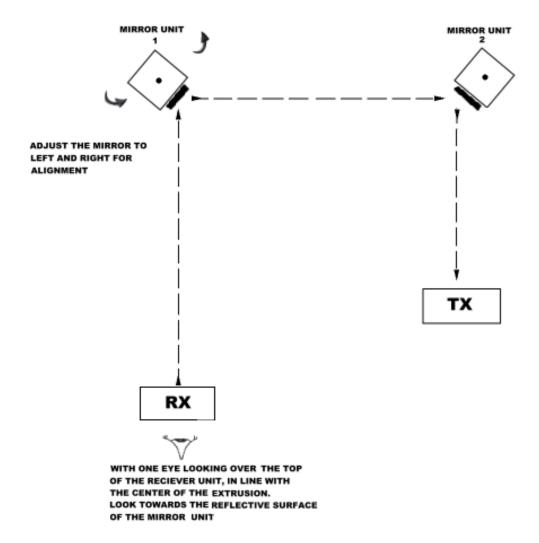

Note: The mirror length must be a minimum of 100mm longer than the overall length of the light curtain to be installed e.g. 50mm above and 50mm below either end of the light curtain.

CD354/220116 43 Smartscan Ltd

Appendix 4 – Specification Table

SPECIFICATION TABLE	
Number of beams	2 - 128
Object detection	14mm, 30mm, 40mm plus perimeter guarding systems
Detection height	158 – 2424 mm
Range	Perimeter guard - 3.0 – 15m
_	0.5 – 6m
	14 mm guard - 0.5 – 4m
	30 mm guard - 0.5 – 6m
	40 mm guard - 3.0 – 15m
Light type	Infrared 880nm
Response time	20ms
Operating temperature	-30°C to +50°C
Light curtain enclosure	IP65 (H x W x D) H x 48 x 61
Power supply	24V DC 2A ±10%
requirement	
Current consumption	1.5A maximum
Light curtain connection	M12 - 8 way pin - IP65
Finish	Aluminium chromate treated, yellow polyester powder coated
Classification	BS EN 61496-1 Type 4
	BS IEC 61496-2 Type 4
	EN ISO 13849 – 1 PL e
	BS EN 62061 SIL 3
Warranty	1 Year

INPUTS	
Safety monitoring (EDM)	ON = +24V DC (3mA)
Reset	ON = +24V DC (3mA)
Mode select	Auto restart with EDM, manual (latched) restart, floating blanking, fixed blanking, mute delay off time, mute disparity, mute time out, partial / fixed muting, and restart interlock.
Muting	ON = +24V DC (3mA) Dual Mute Inputs

OUTPUTS	
Safety outputs	
OSSD1 & OSSD2	Electronic 500mA
Status output	Electronic 500mA
Mute output	Electronic 500mA
Status and mute indication	Status & condition LEDs on the light curtain

CD354/220116 44 Smartscan Ltd

Notes	